 
# IMPORTANT SAFETY INSTRUCTIONS



- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- **5.** Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings.
- 8. Do not install near any heat sources as radiator, heat registers, stoves or other apparatus (including amplifiers)) that produce heat.
- **9.** Only use attachments/accessories specified by the manufacturer.



11. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in

any way, such as power-supply cordor plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- 12. Do not cover the dissipation heat sink. Leave space around the amplifier to ensure a good ventilation.
- 13. The apparatus shall not be exposed to dripping or spashing and no objects filled with liquids, such as vases, shall be placed on the
- **14.** No naked flame sources, such as lighted candles, should be placed on theapparatus.
- **15.** Remove the battery during transportation.

# ITECHNICAL INFORMATION

Frequency Response: 40Hz - 20kHz Max Power Out: 120W System Format: 2 way Amp 100W Woofer Power: Tweeter Power: 20W

**Brich Plywood Cabinet** Construction:

Weight: 11 kg Dimensions (WxHxD)

302x425x310 mm

### N.B. For more information you can download the complete **ONE**FOR**STREET** 10

manual from the company web site.



# **ONE**FOR**STREET**

is a product entirely designed and produced in Italy



#### ACUS SOUND ENGINEERING SRL

Via Cupa Madonna di Varano, 8 - 62019 Recanati (MC) - Italy Tel. +39 071 9793109 www.acus-sound.it - info@acus-sound.it

Bluetooth name and logo are properties of their respective owners. Makita name is the propertie of the respective owner. All brand name and trademarks are properties of their respective owners.




 








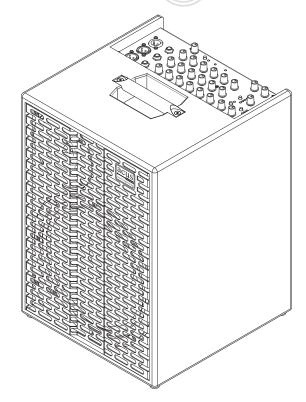



MADE IN ITALY



ISMART ACCESSORIES

1. Make sure that the amplifier is powered off and connect the ACUS Artesia BT-1

2. Turn the amplifier on. The ACUS Artesia BT-1 Bluetooth Receiver blue LED indicator lamp should flash quickly. This lasts for about 5 seconds. Then it will

3. After it has matched successfully, find ACUS Artesia BT-1 as an option on your

4. When the blue LED Indicator lamp on the ACUS Artesia BT-1 Bluetooth Receiver is ON steady with no flashing, then the two devices have been

GND

ONEFORSTREET 8

ACUS Artesia LS-1 - TRRS ADAPTER for your live streaming

flash again every 7 seconds until it matches (or pair) successfully with another

Bluetooth Receiver to mini-USB AUX IN connector.

- CABLE NOT INCLUDED -

1. 3.5 mm Right-Angle Stereo Plug: connect to AUX IN Input.

2. 3-Pole XLR Female Connector:

connect to DIRECT OUT output.

3. 3.5 mm TRRS Jack Connector: connect to

recording /reproduction device used for your Live

Streaming with a 3.5mm TRRS Plug to Plug cable

**Suggestions**: for obtaining better configuration is very

push this switch for a very easy and fast signal level matching.

master volume for obtaining the right sound to the speaker.

important to have a moderate volume to the amplifier DIRECT OUT output.

If the amplifier is equipped with the attenuation switch (labeled with -10dB)

If the amplifier is not equipped with this switch, for best configuration please

reduce all channel volume more than half and then regulate the amplifier


Bluetooth Device's Settings and then select it to connect.

**ACUS Artesia BT-1** 

Bluetooth device.

successfully connected.

## POWER SUPPLY

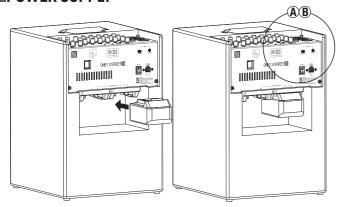

**ONEFORSTREET 10** is not equipped with an inner power supply system. Is possible to power it with 2 types of source:

- 1. Battery (not included): insert the battery in the dedicated sled
- External Power Supply (included): connect the power supply to the relative connector.

#### COMPATIBILITY:

ACUS Sound Engineering SRL suggest the use of MAKITA 18V- 3 or 5 Ah.

#### **BATTERY POWERING:**

The system has 4 operative status:

- 1. Battery Full: Battery Status LED (17) is OFF
- Slightly Discharged Battery Status: Battery Status LED (17) starts to flash In this status the LED ON Time is about 1/3 of LED Time OFF.
- Very Low Battery Status: Battery Status LED (17) ON Time is the same of Time ON.
- Completely Discharged Battery Status: Battery Status LED (17) if always
  ON and the system stops to work. In this status is necessary to replace the
  battery with another one full.

#### WARNING:

- 1. Is important to recharge the battery as soon as possible.
- Avoiding to let the ON/OFF Switch (22) when the system is not used because the system continue to absorb energy.
- 3. Avoid to let a totally discharged battery inserted because the system adsorbs a very little quantity of energy even with the ON/OFF Switch in the OFF position, and this fact (for a long time) will put the battery in a very low discharged status, reducing the battery life.


#### EXTERNAL POWER SUPPLY POWERING.

The system works always in "Battery Full" status, so Battery Status LED (17) is always OFF.


#### WARNING

Is no possible to recharge a battery with the amplifier power supply.

# TOP SECTION

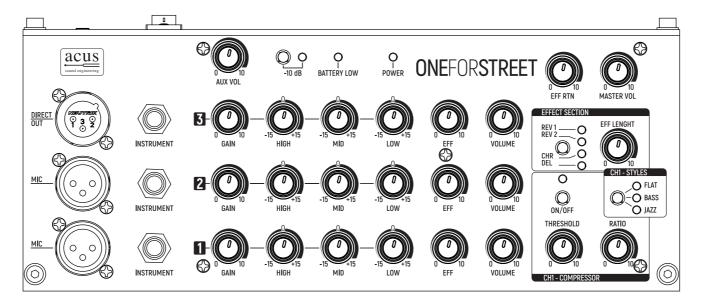

## REAR SECTION

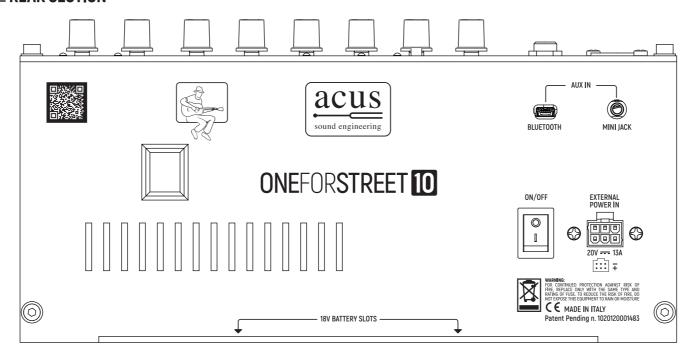

## CONTROLS

- MIC IN with 1kΩ of Impedance. You can connect any type of microphone on it, even Condenser Microphone (this input is equipped with a Phantom power, always Active).
- INSTRUMENT IN with 110kΩ of Impedance. You can connect any type of Instrument on it. This input doesn't exclude the MIC IN (1).
- **3. GAIN:** this knob permits to regulate the gain of the system (its range is from -12 to +15dB).
- 4. HIGH MID LOW: 3 band EQ with a dynamic from -15dB to +15dB.
- EFF: channel Effect Level. The system is equipped with a multi-effect. For detail see points (14) and (15).
- 6. VOLUME: channel Volume
- 7. AUX VOL: AUX IN (20) Inputs Volume.
- 8. MASTER VOL: Master Volume of the system.
- **9. EFF RTN:** Return of the Effect of the system. When you close totally this knob (in the 0 position) you close the effect volume on all channels.
- 10. CH1 COMPRESSOR ON/OFF SWITCH: the channel 1 is equipped with a compressor. This switch is for turning ON/OFF the compressor. When the compressor is ON its relative LED is ON.
- 11. CH1 COMPRESSOR THRESHOLD: with this knob you can regulate the Ch1 Compressor Threshold if Ch1 Compressor ON/OFF is on ON position (Compressor LED ON).
- 12. CH1 COMPRESSOR RATIO: with this knob you can regulate the Ch1 Compressor Ratio if Ch1 Compressor ON/OFF is on ON position (Compressor LED ON).
- 13. CH1 STYLES SWITCH: with this switch is possible to change the channel 1 equalization and the 3 bands EQ center frequency. You have 3 position: FLAT is the standard equalization (channels 2 and 3 have only this type of equalization). BASS is designed for instruments that operate in bass frequency range (like Bass Guitar and Double Bass). JAZZ is for Electrinc Guitar and Jazz Guitar.
- 14. EFFECT SECTION SWITCH: with this switch is possible to select one of the 4 effect of the system. Effect are Short Reverb (REV 1), Long Reverb (REV 2), Chorus (CHR) and Delay (DEL)
- **15. EFFECT SECTION EFF LENGTH:** with this knob is possible to change the peculiarity of the selected effect. For both reverb this knob regulates the Reverb Length. For Chorus this knob regulates the Chorus Rate. For Delay this knob regulates the Delay Time.
- 16. POWER: LED for indicating if the system is ON (Led ON) or OFF
- **17. BATTERY STATUS:** LED for indicating the External Battery Status.
- **18. -10dB:** pushing this switch will reduce the DIRECT OUT (19) signal level of 10dB. This attenuation condition is indicated with a LED.
- 19. DIREC OUT: balanced output for connecting the system with an External System.
- **20. AUX IN:** section with 2 Inputs: a 3.5mm Jack and a mini-USB for Acus Artesia BT-1 device. Both inputs are controlled with AUX VOL (7) knob.
- 21. EXTERNAL POWER IN: connector for the External Power Supply (Included)
- 22. ON/OFF: Power Switch for Turning-ON / OFF the system.
- 23. 18V BATTERY SLOTS: slot connection for powering the system with the external battery (not included).

