



Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (supplied on a separate sheet). After reading, keep the document(s) where it will be available for immediate reference.

Main Features

The JB-2 is a distortion pedal cooperatively developed by JHS PEDALS and BOSS.

- It is equipped with two completely independent distortion effects designed respectively by JHS PEDALS and BOSS.
- By switching modes, you can use the JHS PEDALS and BOSS sounds individually, or use them together in series (with your choice of connection order) or parallel to create a wide variety of rock sounds.
- If you connect a footswitch to the REMOTE jack, you can use it in conjunction with the pedal switch for additional options, such as switching between distortions or turning the effect on/off.

Panel Descriptions

DC IN jack

Accepts connection of an AC Adaptor (PSA series; sold separately). By using an AC Adaptor, you can play without being concerned about how much battery power you have left.

- * We recommend that you keep batteries installed in the unit even though you'll be powering it with the AC adaptor. That way, you'll be able to continue a performance even if the cord of the AC adaptor gets accidentally disconnected from the unit.
- * Use only the specified AC adaptor (PSA-series).
- * If the AC adaptor is connected while power is on, the power supply is drawn from the AC adaptor.

AC Adaptor
(PSA series; sold separately)

LEVEL knobs


These adjust the volume of the effect sound. Clockwise rotation raises the volume and counterclockwise rotation decreases.

STONE knobs

These adjust the tone of the effect sound. As you rotate the knob clockwise, higher frequencies are emphasized, and counterclockwise cuts them.

OUTPUT jack

Connect an amplifier to this jack.



Guitar Amplifier

Pedal switch

This switch turns the effect on/off or switches between the two types of distortion.

- * The operation that occurs when you press the pedal depends on the mode. For details, refer to "Operation at a Glance."

Thumbscrew

When this screw is loosened, the pedal will open, allowing you to change the battery.

- * For instructions on changing the battery, refer to "Changing the Battery."

CHECK indicator

This indicator shows whether an effect is ON/OFF, and doubles as the Battery Check indicator. The indicator lights when an effect is ON. The indicator also shows which effect is active: JHS PEDALS and/or BOSS.

Indicator color	Effect type
Red	JHS PEDALS
Blue	BOSS
Purple	Both JHS PEDALS and BOSS

- * If this indicator goes dim or no longer lights while an effect is ON, the battery is near exhaustion and should be replaced immediately.
- * The CHECK indicator shows whether the effect is on or off, and indicates the different functions. It does not indicate whether the power to the device is on or not.

MODE knob

This switch switches between modes (JHS, BOSS, JHS/BOSS, J▶B, B▶J, PARALLEL).


For details, refer to "Mode List."

DRIVE knobs

These adjust the depth of the distortion effect. Rotating the knob clockwise deepens the distortion creating powerful distortion effect. Rotating the knob counterclockwise makes lighter distortion.

INPUT jack

This jack accepts input signals (coming from a guitar, some other electric or electronic musical instrument, or another effects unit).

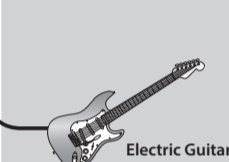

Electric Guitar

- * The INPUT jack also serves as the power switch. Power is turned on whenever a plug is inserted into the INPUT jack, and is turned off when the plug is disconnected. When not using the unit, you should disconnect any cable connected to the INPUT jack.

REMOTE jack

Here you can connect a latch-type footswitch (sold separately: FS-5L, FS-6, FS-7).


- * In the case of the FS-6 or FS-7, only latch mode can be used. By operating the footswitch you can switch between the two types of distortion or turn them on/off individually. For details, refer to "Operation at a Glance."

IMPORTANT NOTES

- * Some settings might cause the JB-2 to oscillate or might result in increased noise, but this is not a malfunction.
- * To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.
- * Once everything is properly connected, be sure to follow the procedure below to turn on their power. If you turn on equipment in the wrong order, you risk causing malfunction or equipment failure.
 - When powering up: Turn on the power to your guitar amp last.
 - When powering down: Turn off the power to your guitar amp first.
- * Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.
- * If operating this unit on batteries, please use alkaline or carbon battery.
- * When operating on battery power only, the unit's indicator will become dim when battery power gets too low. Replace the battery as soon as possible.
- * If you handle batteries improperly, you risk explosion and fluid leakage. Make sure that you carefully observe all of the items related to batteries that are listed in "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (supplied on a separate sheet).

Changing the Battery

- Hold down the pedal and loosen the thumbscrew, then open the pedal upward.
 - * The pedal can be opened without detaching the thumbscrew completely.
- Remove the old battery from the battery housing, and remove the snap cord connected to it.
- Connect the snap cord to the new battery, and place the battery inside the battery housing.
 - * Be sure to carefully observe the battery's polarity (+ versus -).
- Slip the coil spring onto the spring base on the back of the pedal, and then close the pedal.
 - * Carefully avoid getting the snap cord caught in the pedal, coil spring, and battery housing.
- Finally, insert the thumbscrew into the guide bush hole and fasten it securely.

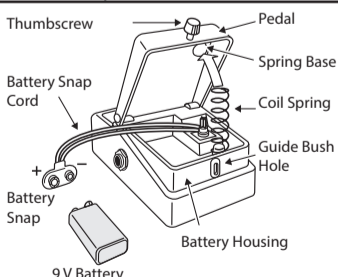

MODE List

Use the MODE knob to select the effect you want.

MODE	Explanation
JHS	A high-gain distortion with a design based on the "Angry Charlie" made by JHS PEDALS. It's a classic sound with a distinctively rich low-frequency range and thick mids.
BOSS	An overdrive with a design based on the BOSS "BD-2" Blues Driver. It's noted for a broad range of expression that responds to your guitar volume and picking dynamics. With a broad range of gain variation, you can create a wide variety of sounds from crunch to hard rock.
JHS/BOSS	Switch between the "JHS" and "BOSS" effects.
J▶B (*1)	Series connection in the order of "JHS" → "BOSS."
B▶J (*1)	Series connection in the order of "BOSS" → "JHS."
PARALLEL (*1)	"JHS" and "BOSS" circuits connected in parallel.

(*1) Both JHS PEDALS and BOSS are on.

Operation at a Glance

This table shows the operations of the pedal switch and of a footswitch connected to the REMOTE jack.

MODE	Pedal switch	Footswitch
JHS	Effect ON/OFF	Switch between JHS/BOSS
BOSS	Effect ON/OFF	Switch between JHS/BOSS
JHS/BOSS	Switch between JHS/BOSS	Effect ON/OFF
J▶B	Effect ON/OFF	JHS ON/OFF
B▶J	Effect ON/OFF	BOSS ON/OFF
PARALLEL	Effect ON/OFF	BOSS ON/OFF

Intellectual Property Right

- Roland, BOSS, BLUES DRIVER are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.

CMSIS-RTOS RTX Version 4.70.1

Copyright (c) 1999-2009 KEIL, 2009-2015 ARM Germany GmbH

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of ARM nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

Main Specifications

BOSS JB-2: Angry Driver

Nominal Input Level	-20 dBu
Input Impedance	1 MΩ
Nominal Output Level	-20 dBu
Output Impedance	1 kΩ
Recommended Load Impedance	10 kΩ or greater
Power Supply	Alkaline battery (9 V, 6LR61) or Carbon-zinc battery (9 V, 6F22) AC adaptor (sold separately)
Current Draw	50 mA (DC 9 V) Expected battery life under continuous use: Alkaline: 9.5 hours, Carbon: 2.5 hours, * These figures will vary depending on the actual conditions of use.
Dimensions	73 (W) x 129 (D) x 59 (H) mm 2-7/8 (W) x 5-1/8 (D) x 2-3/8 (H) inches
Weight	440 g / 1 lb (including battery)
Accessories	Owner's Manual, Leaflet ("USING THE UNIT SAFELY," "IMPORTANT NOTE," and "Information") Alkaline battery (9 V, 6LR61)
Options (sold separately)	AC adaptor (PSA-series) Footswitch: FS-5L, FS-6, FS-7 * The FS-6 and FS-7 can be used only in latch mode.

* 0 dBu = 0.775 Vrms

- * This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL COPYRIGHT HOLDERS AND CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.